 
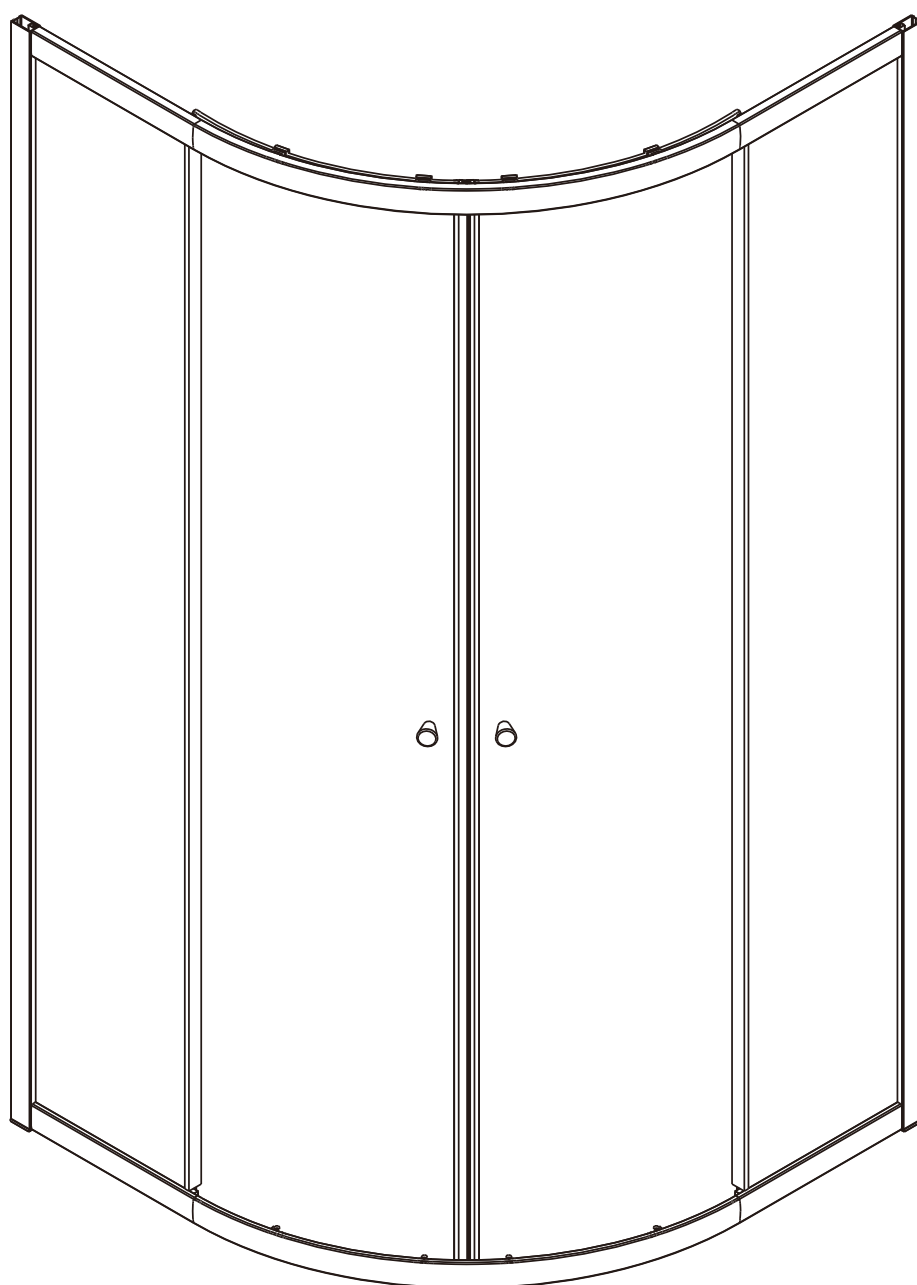 


 
 
 
 
 

 

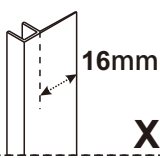 


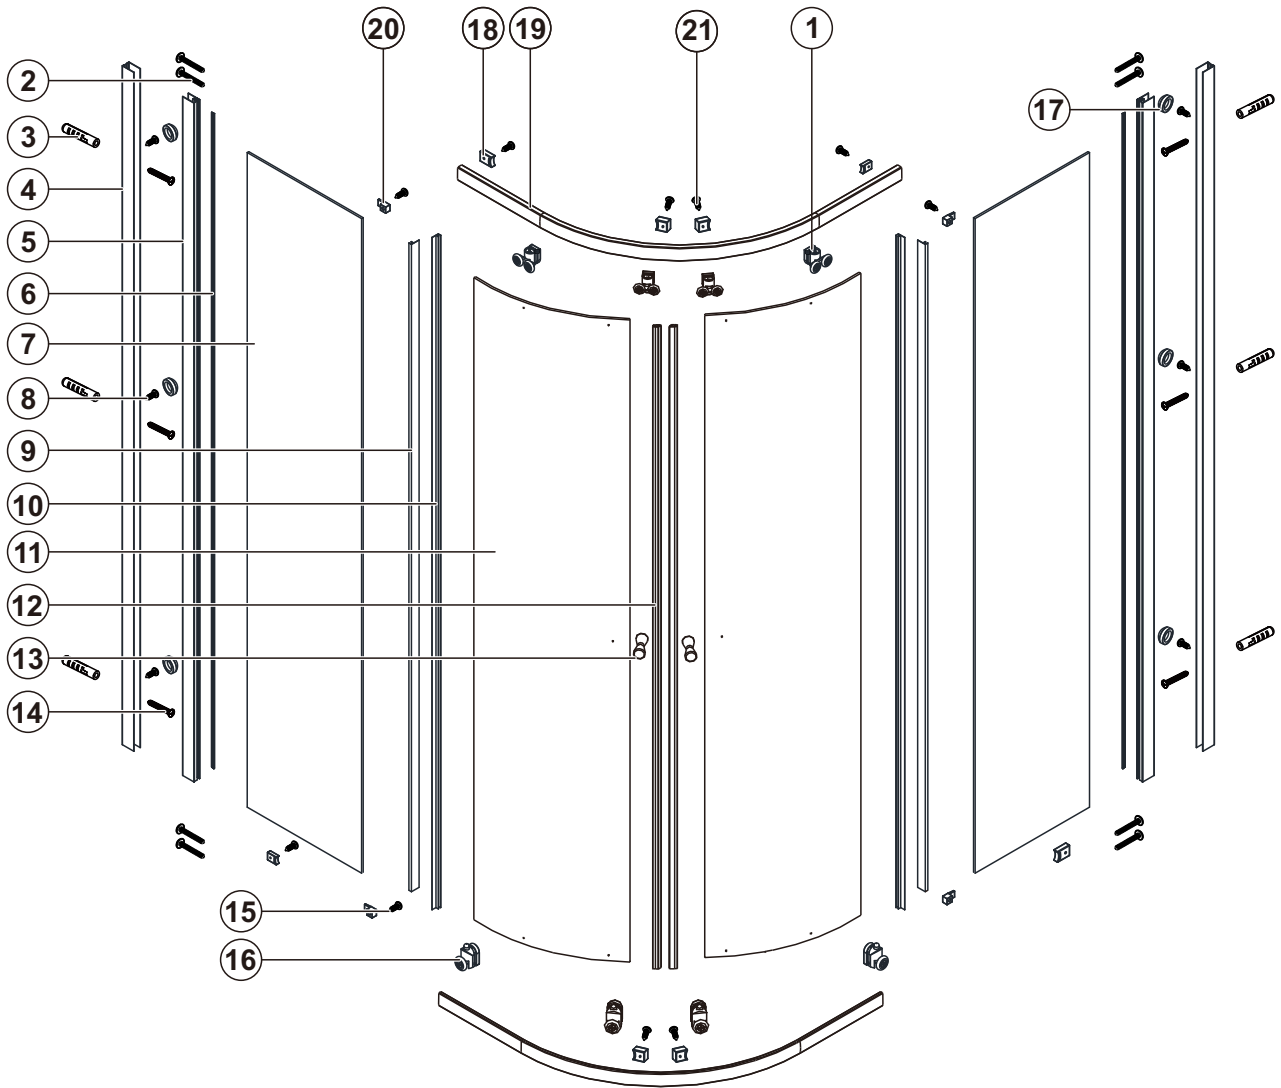

 

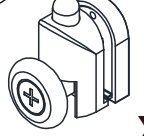 


 
 

 


montážní návod / installation instruction
BLS800/BLS900

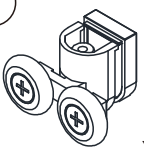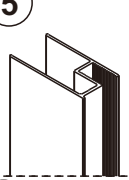


PARTS LIST






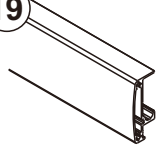
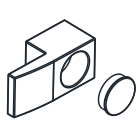
 1 X4	 2 ST4*30 X8	 3 X6	 4 X2	 5 X2	 6 X2
 7 X2	 8 ST4*13 X6	 9 16mm X2	 10 12mm X2	 11 X2	 12 X1
 13 X2	 14 ST4*40 X6	 15 ST4*10 X4	 16 X4	 17 X6	 18 X8
 19 X2	 20 X4	 21 ST4*8 X8	 22 Φ3 X1		

 TOOLS



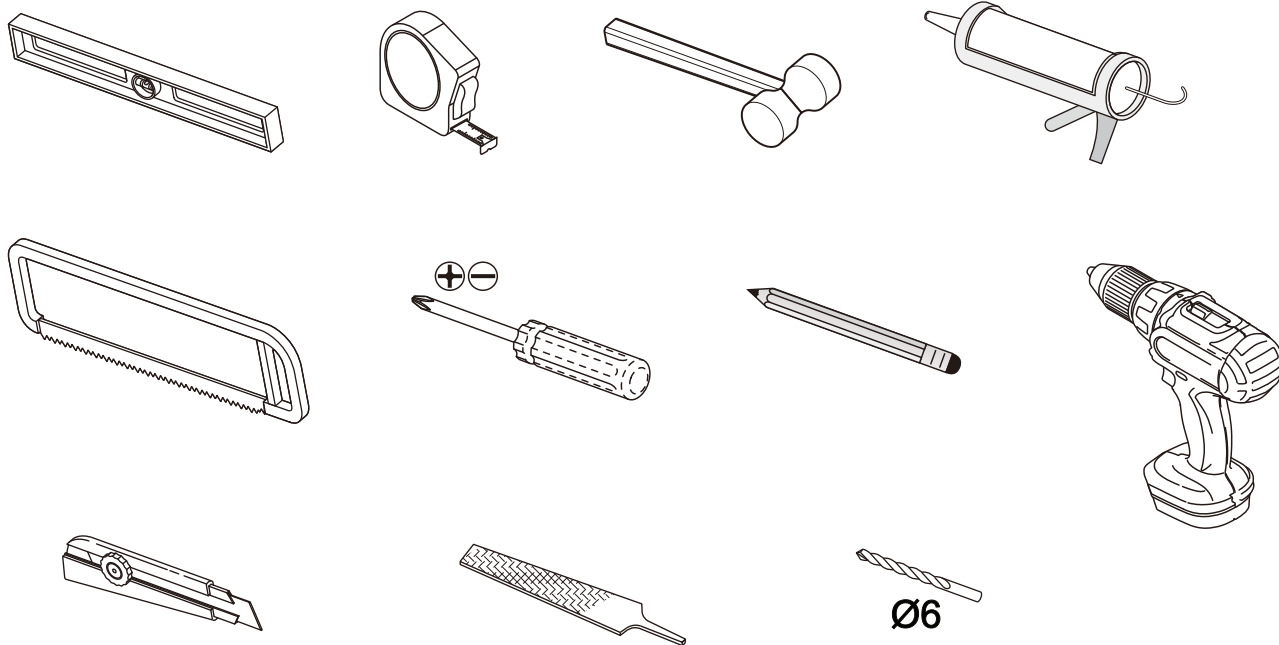


INSTALLATION

  
 
 
 
STEP 1

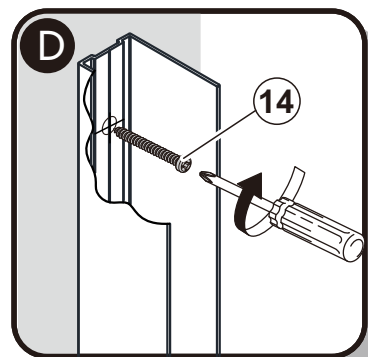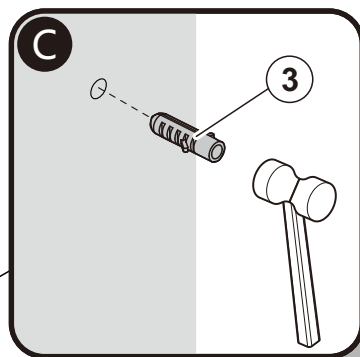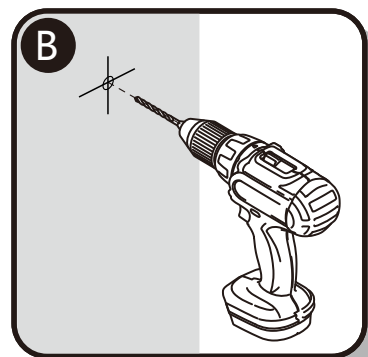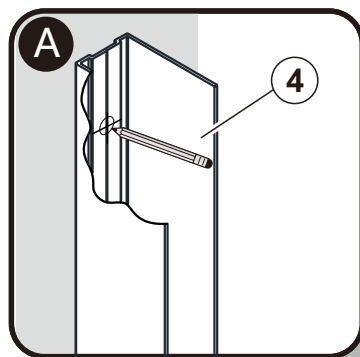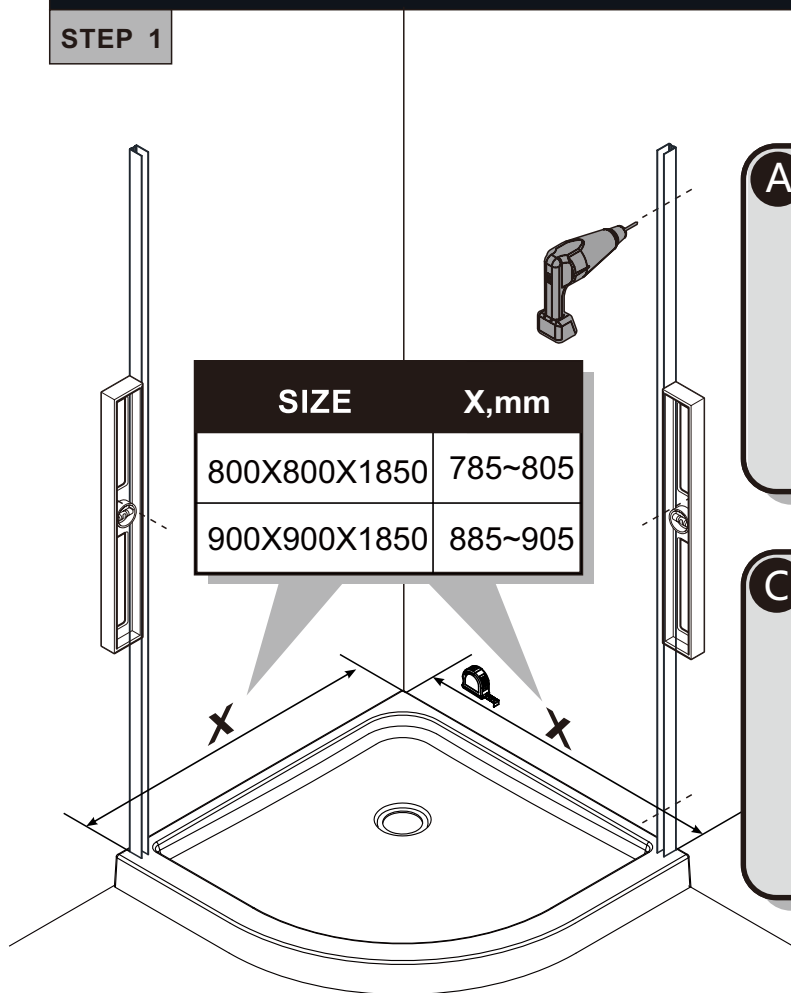




 
 
 
STEP 2

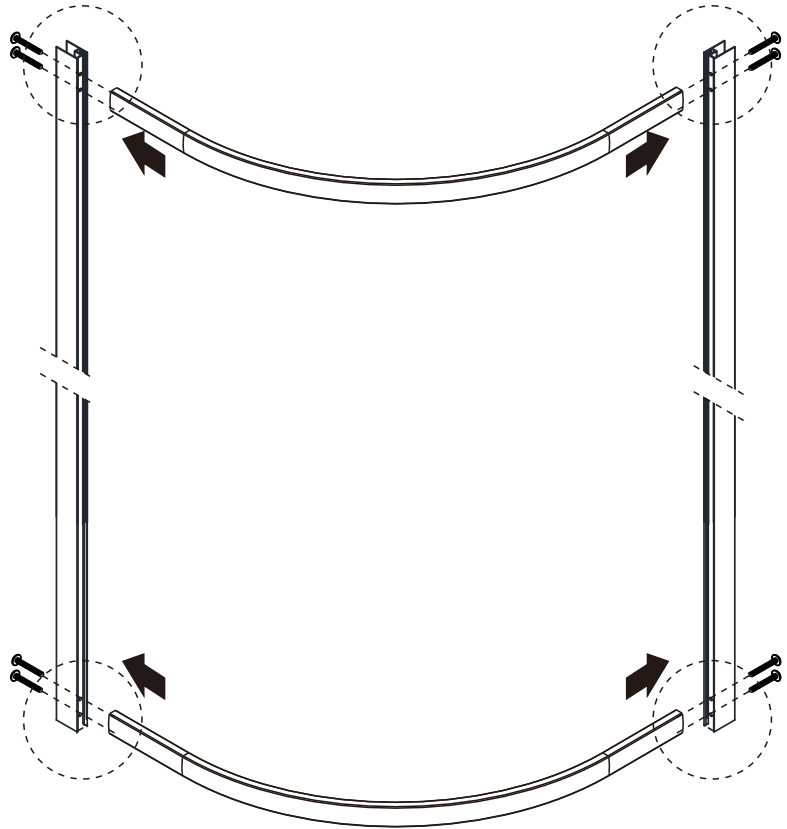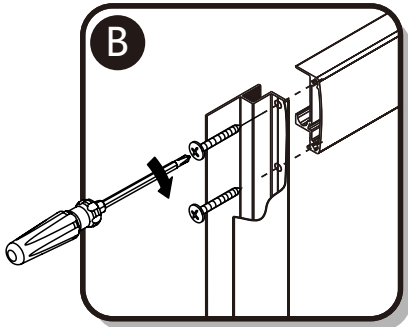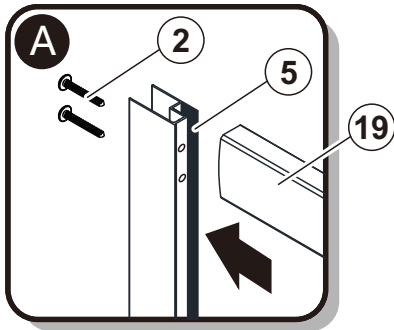



 
 
 
 
STEP 3

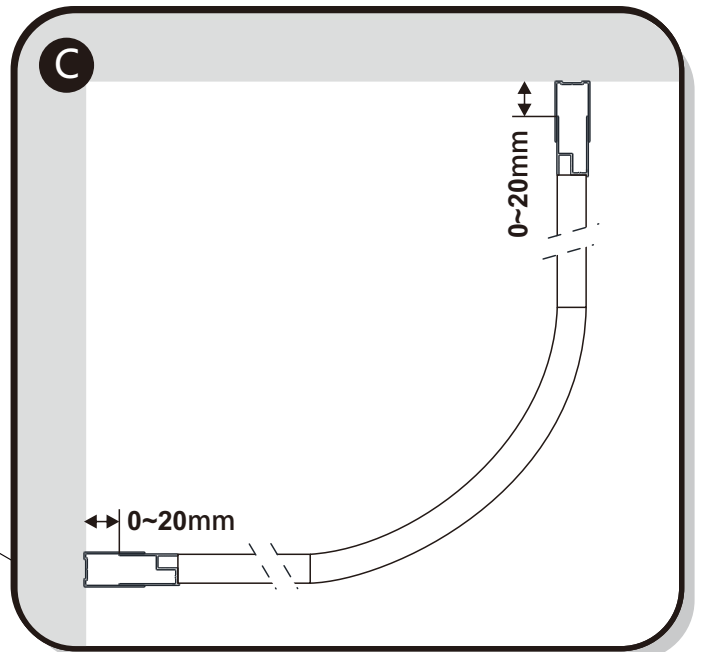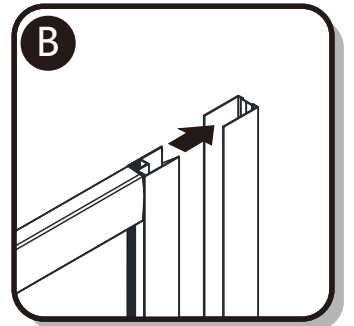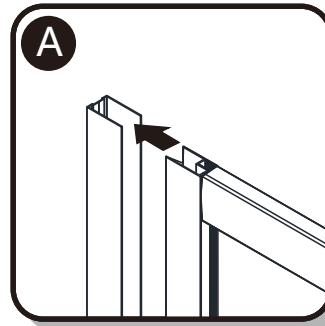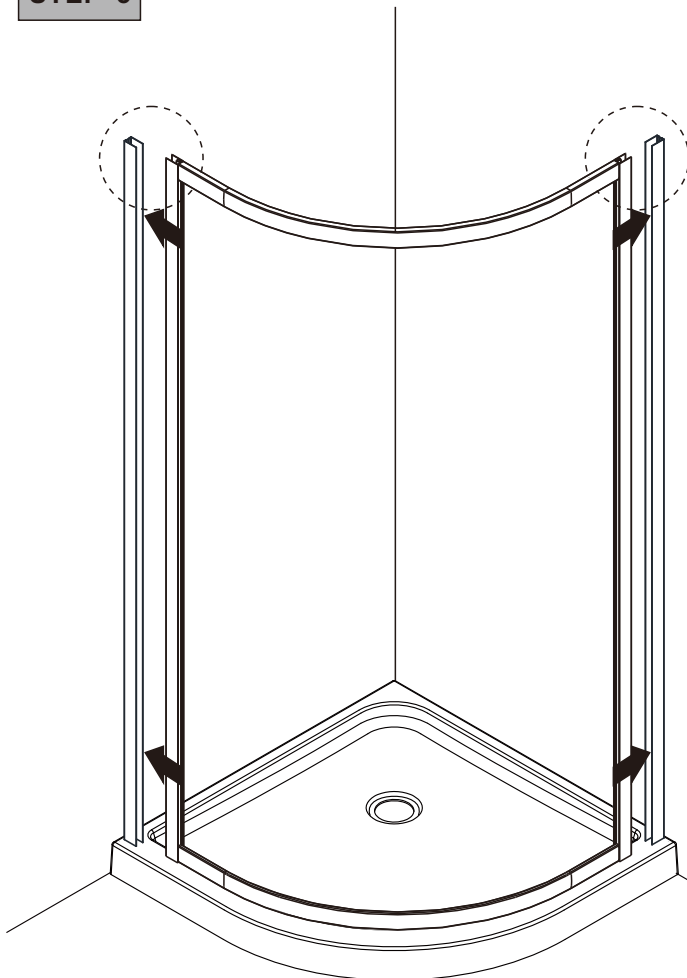

      
STEP 4

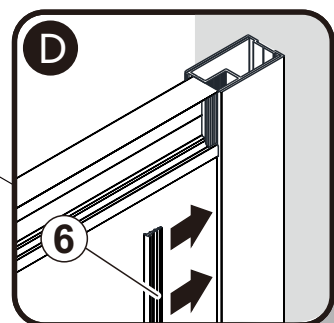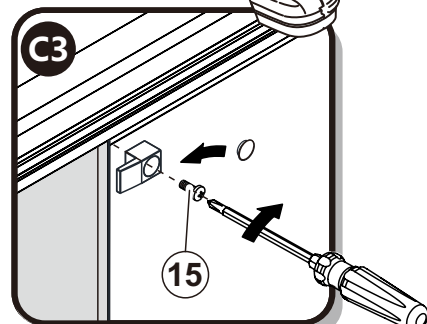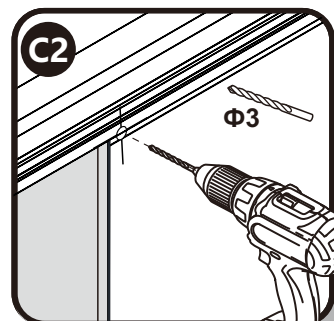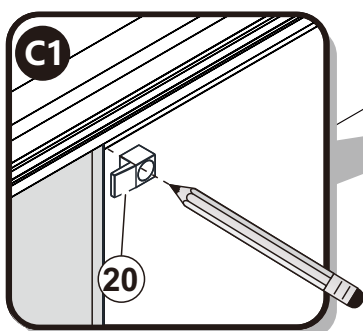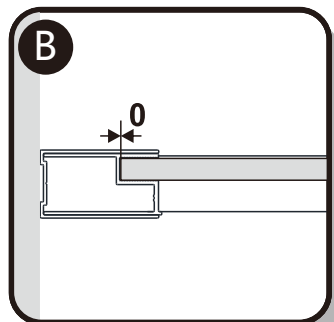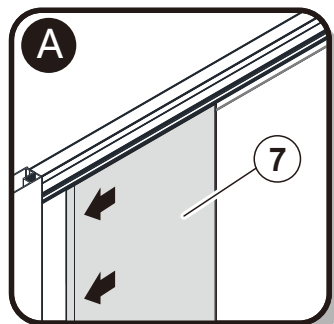

      
STEP 5

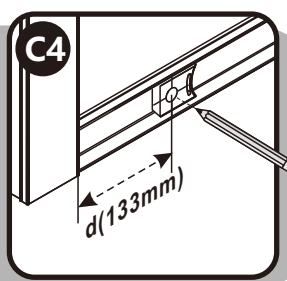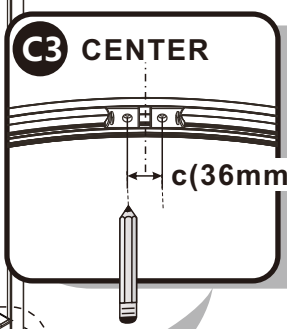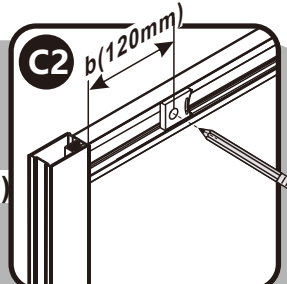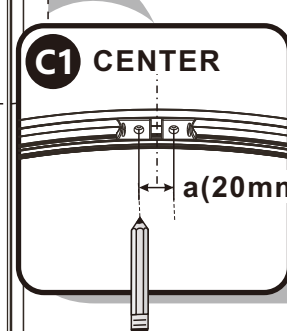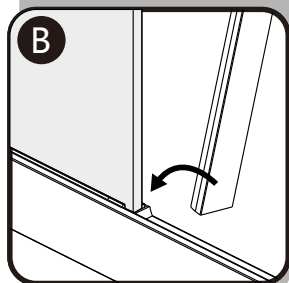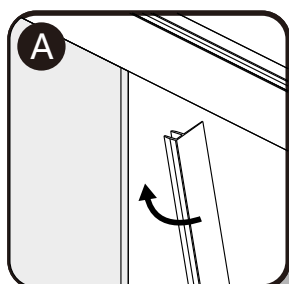


 
STEP 6

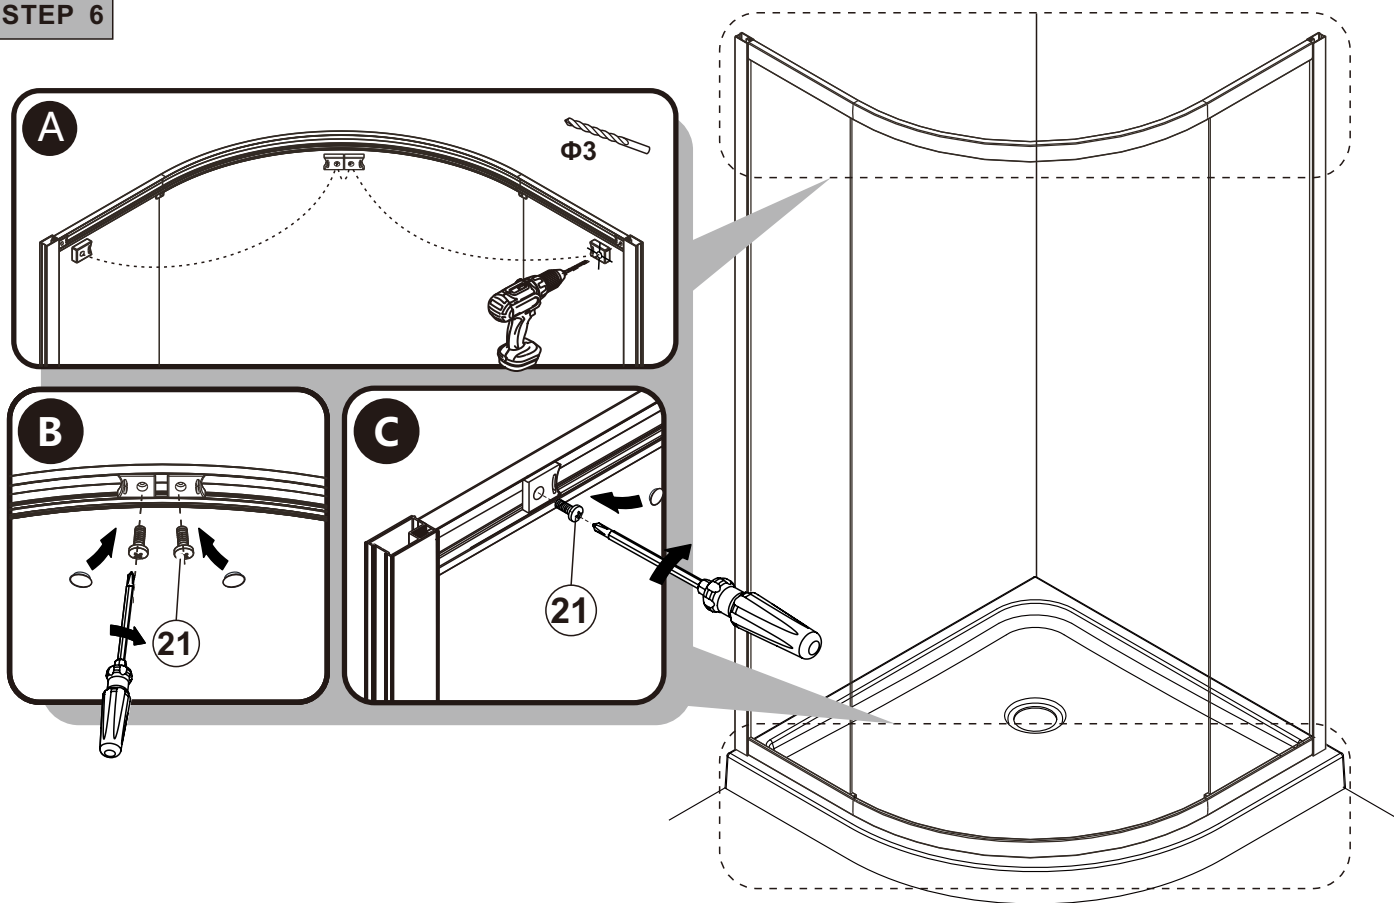





 
STEP 7

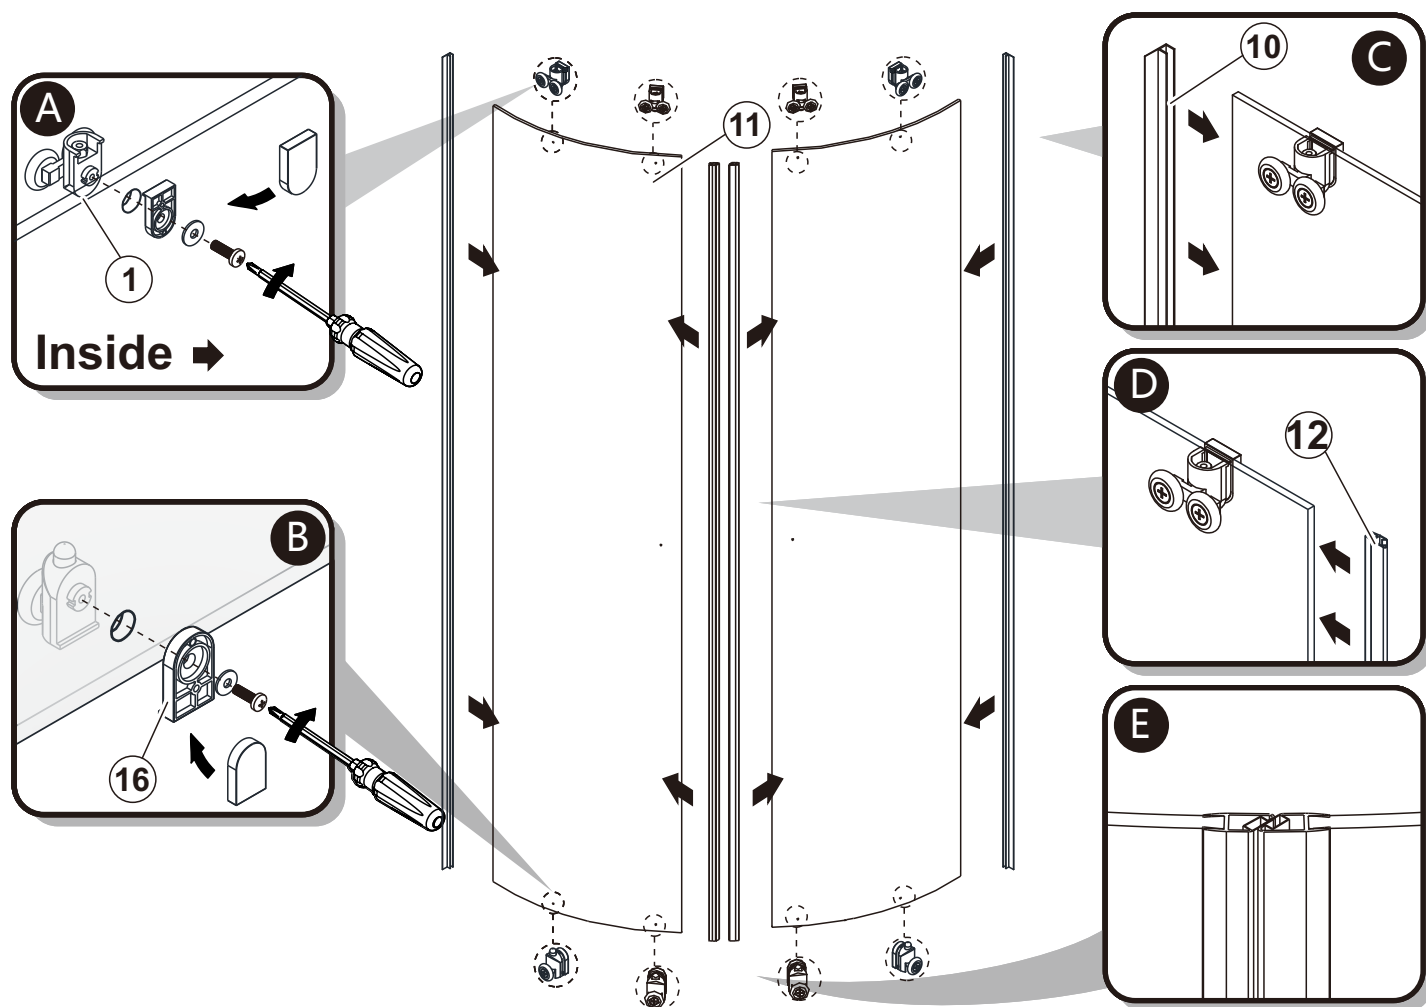


 
 
STEP 8

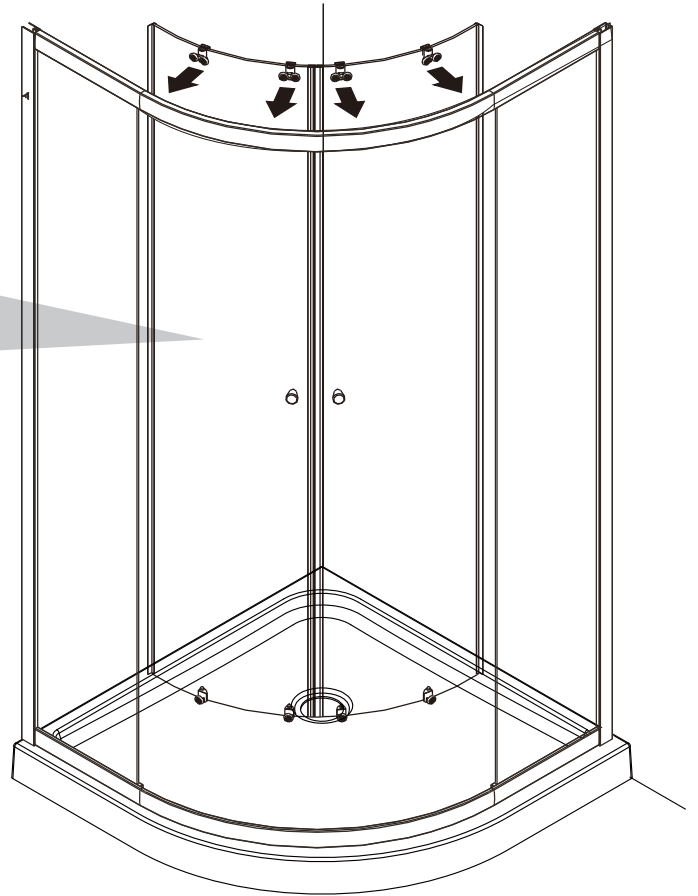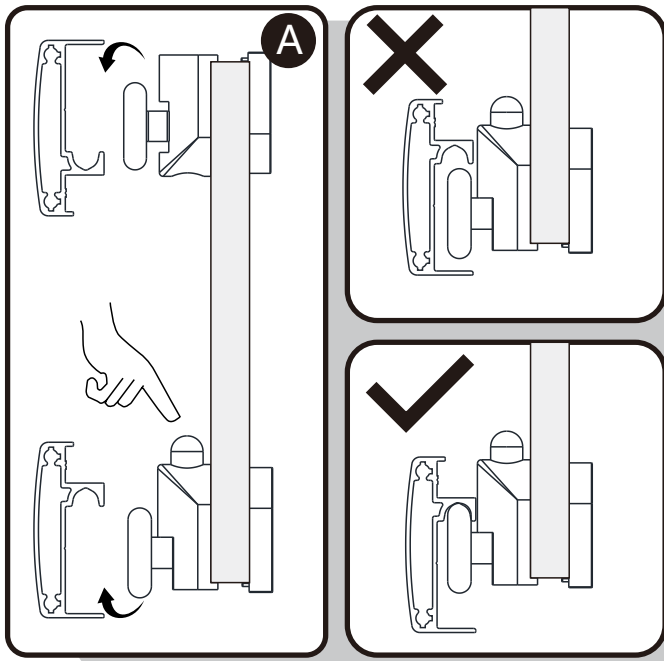

     STEP 9

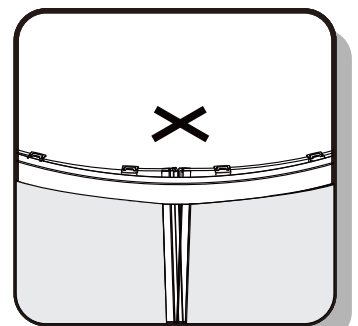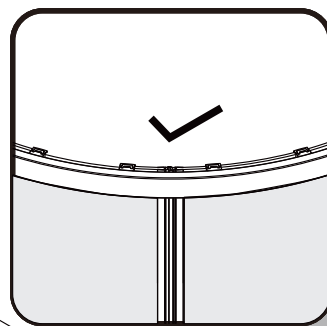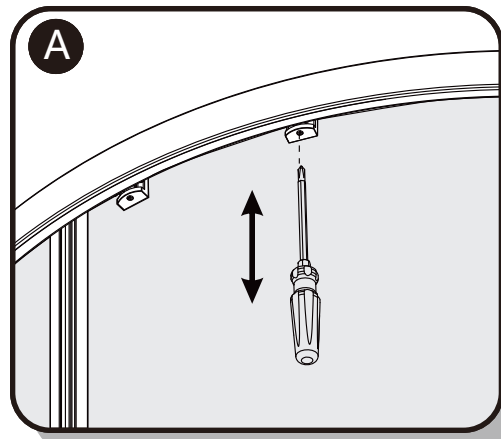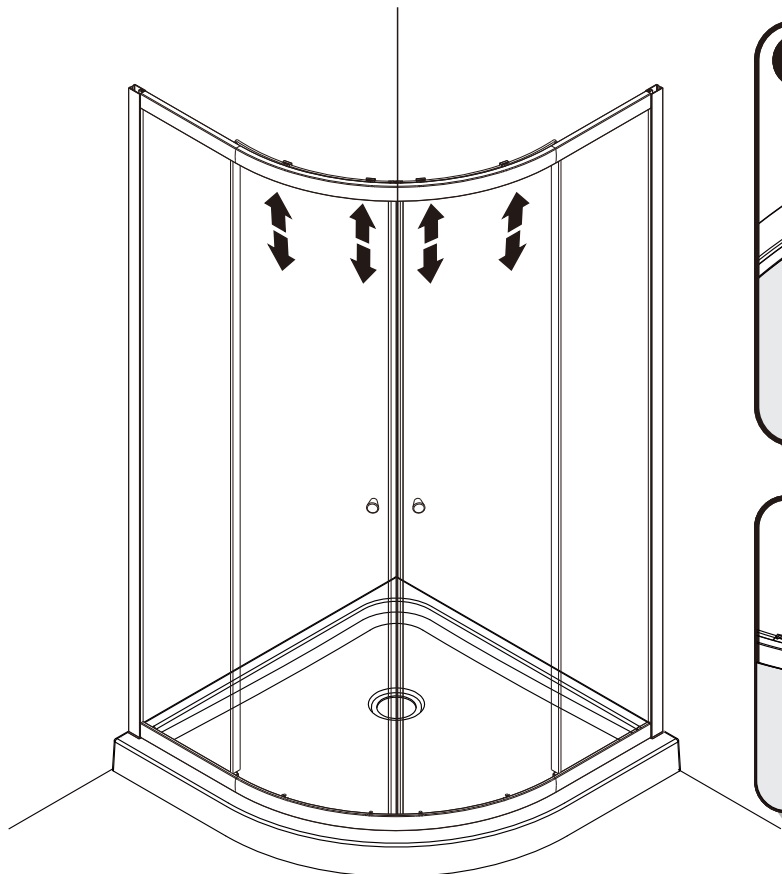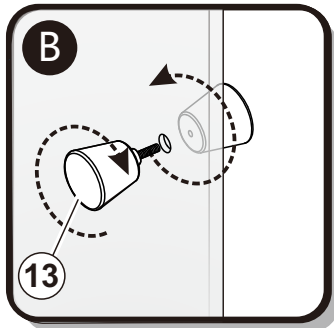

   STEP 10

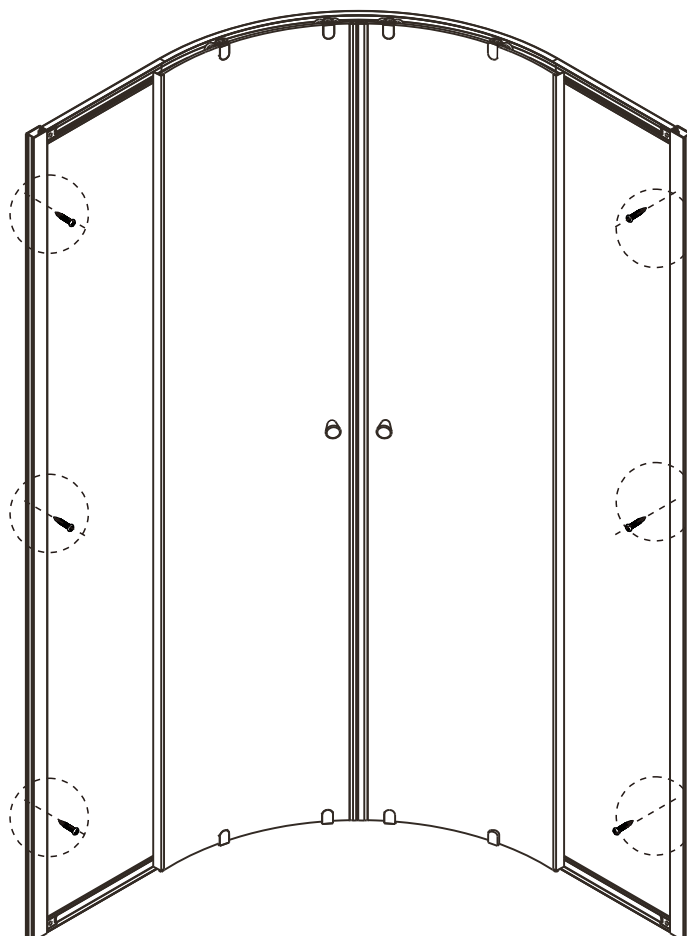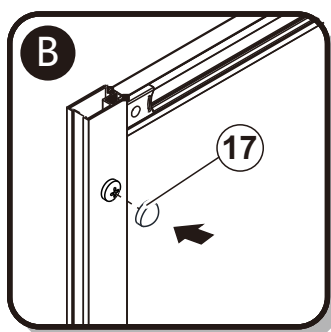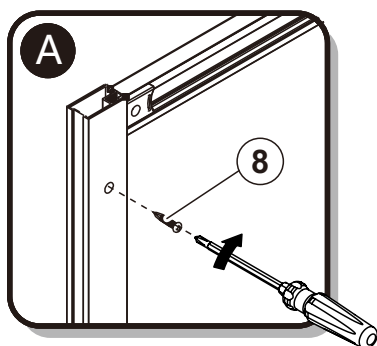

STEP 11

