


polysan

VIVA R

GB Mounting instructions
CZ Montážní návod
H Szerelési utasítás
RU Инструкция по монтажу
D/A Montageanleitung
PL Instrukcja montażu


RO Instrucțiuni de montaj
ES Manual de instrucciones
FR Notice de montage
NL Montage instructie
LT Montavimo instrukcija
SK Montážny návod

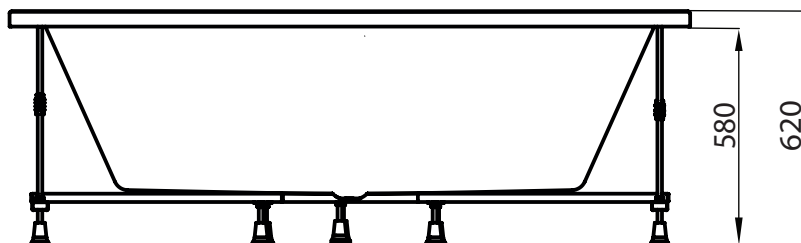


- ① 4x M12x40
- ② 26x M12
- ③ 3x M12
- ④ 16x 6x20
- ⑤ 16x M10/19
- ⑥ 20x M12/23
- ⑦ 3x M12/36
- ⑧ 7x
- ⑨ 7x
- ⑩ 3x
- ⑪ 8x



- ⑫ 3x 600
- ⑬ 4x 125
- ⑭ 1x
- ⑮ 1x
- ⑯ 2x
- ⑰ 1x

- ⑱ 8x 8x40
- ⑲ 2x M10/23
- ⑳ 2x M10
- ㉑ 4x
- ㉒ 2x
- ㉓ 2x M10
- ㉔ 8x 4x40

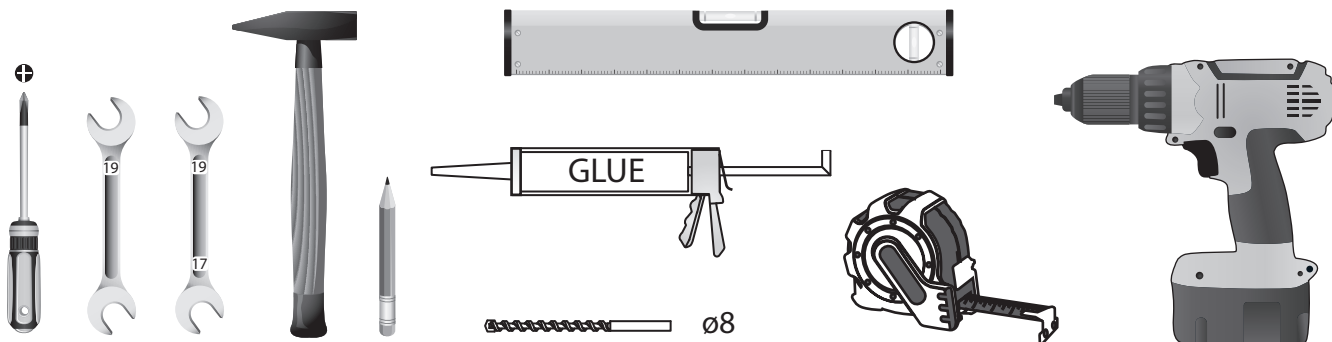


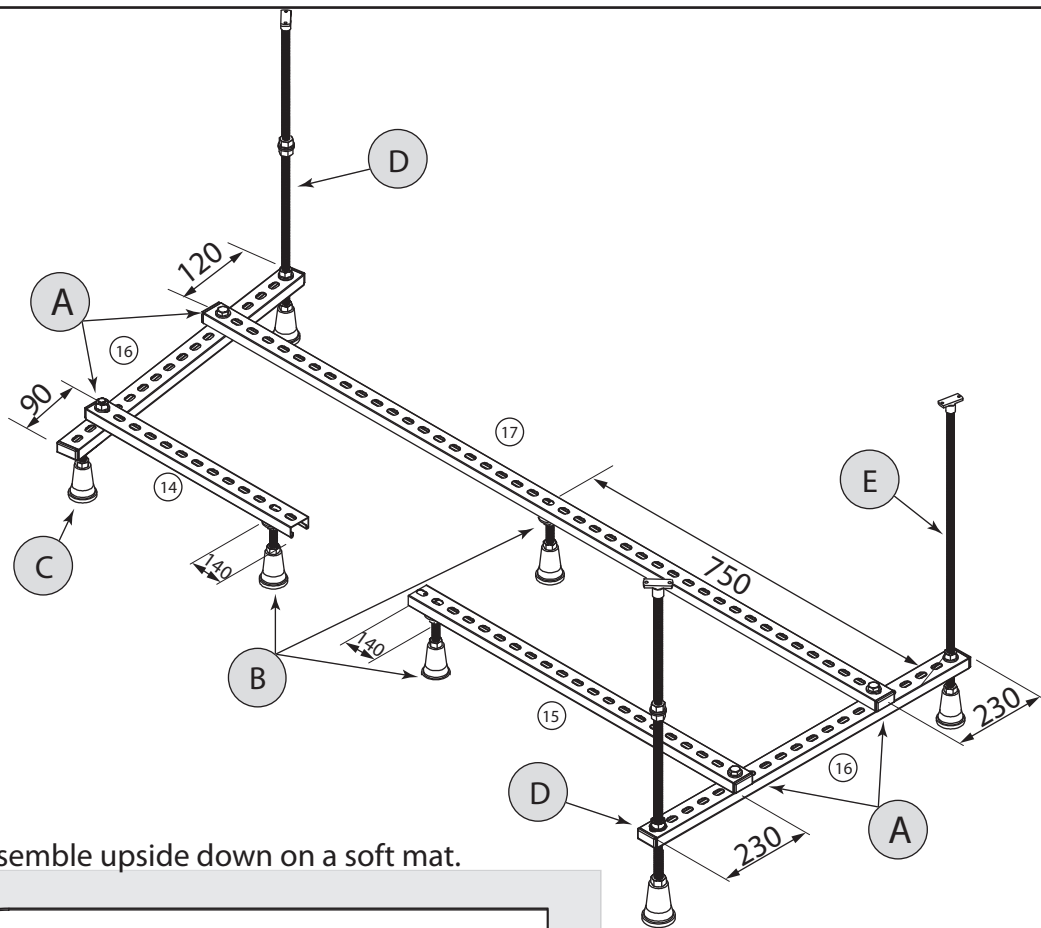

Assemble upside down on a soft mat.

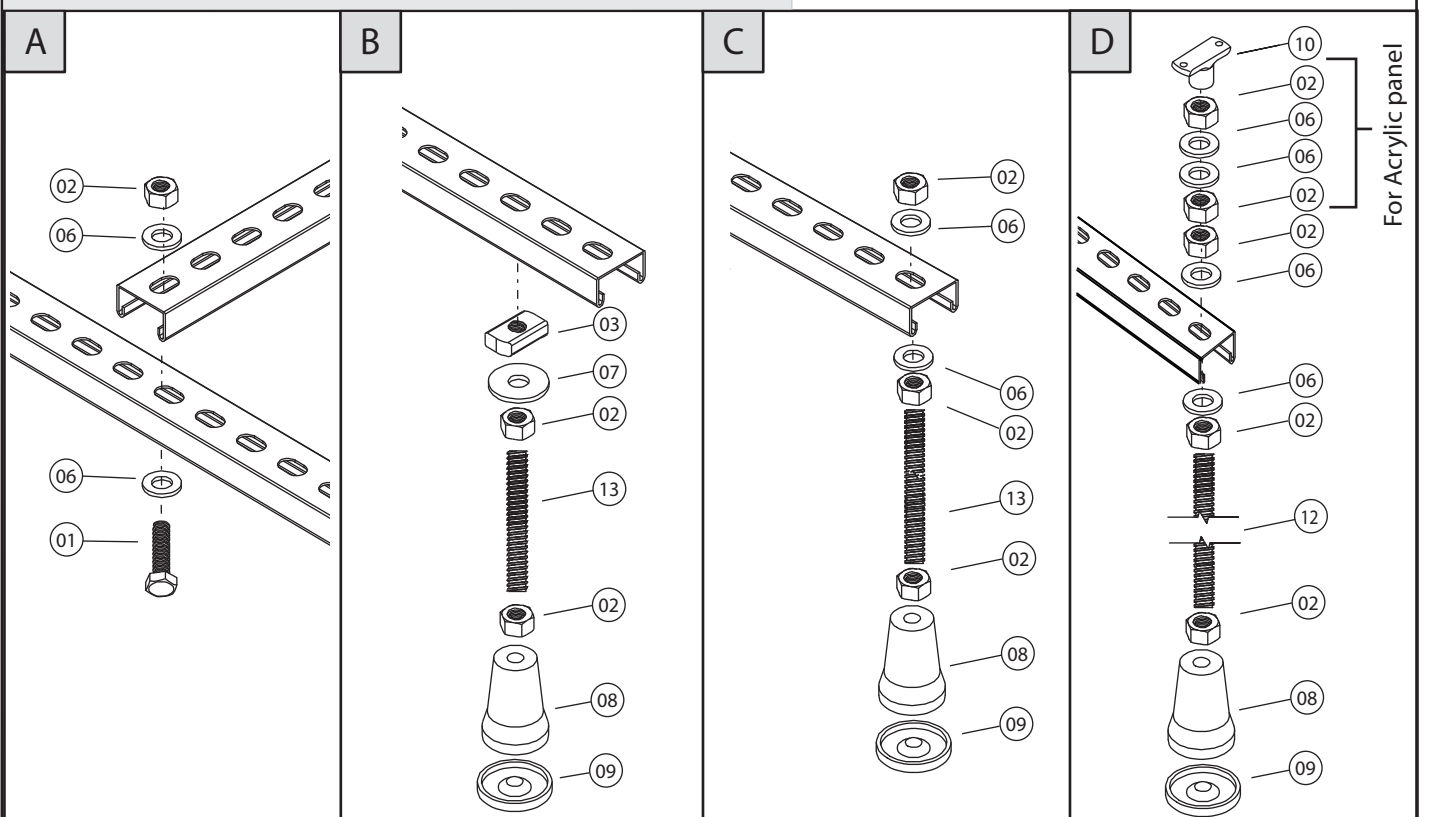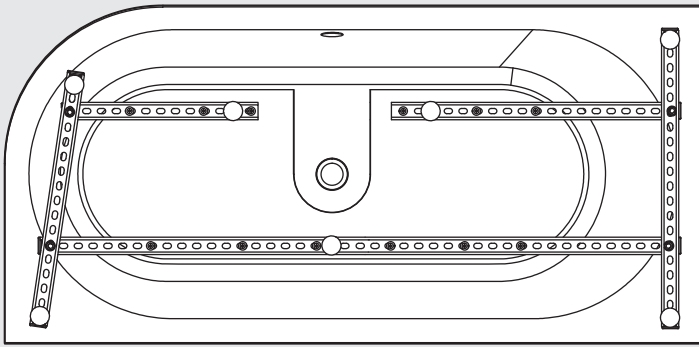


E

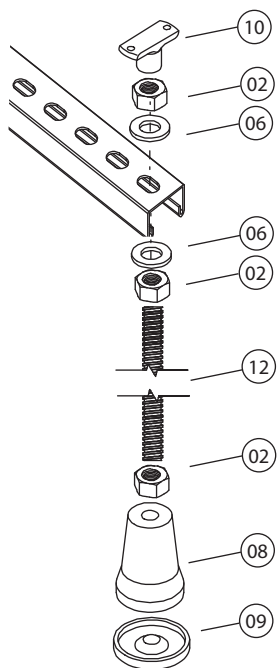


GLUE NOT INCLUDED




Glue

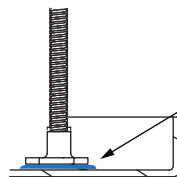


3x





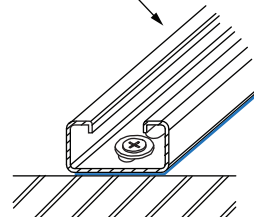


F

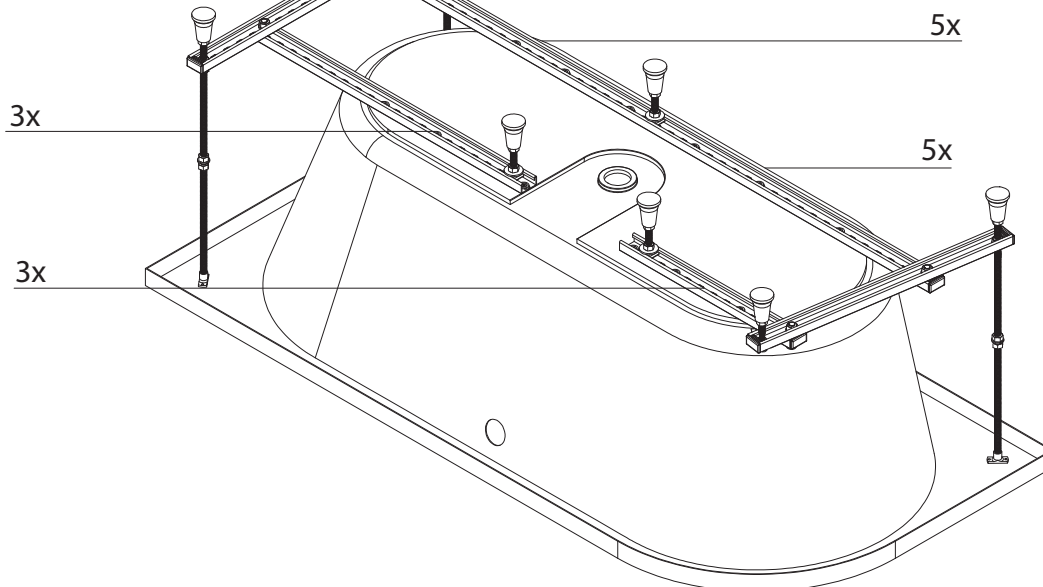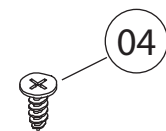

G

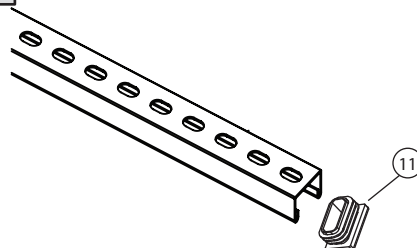

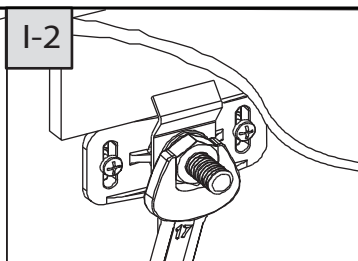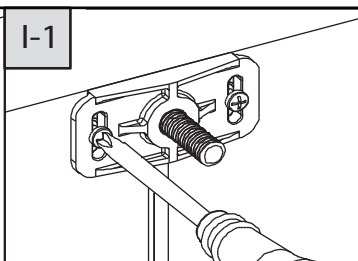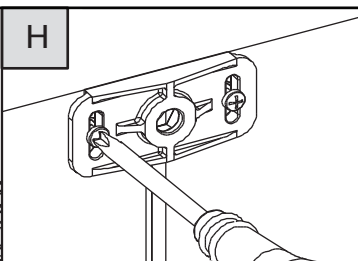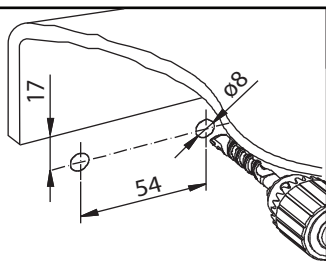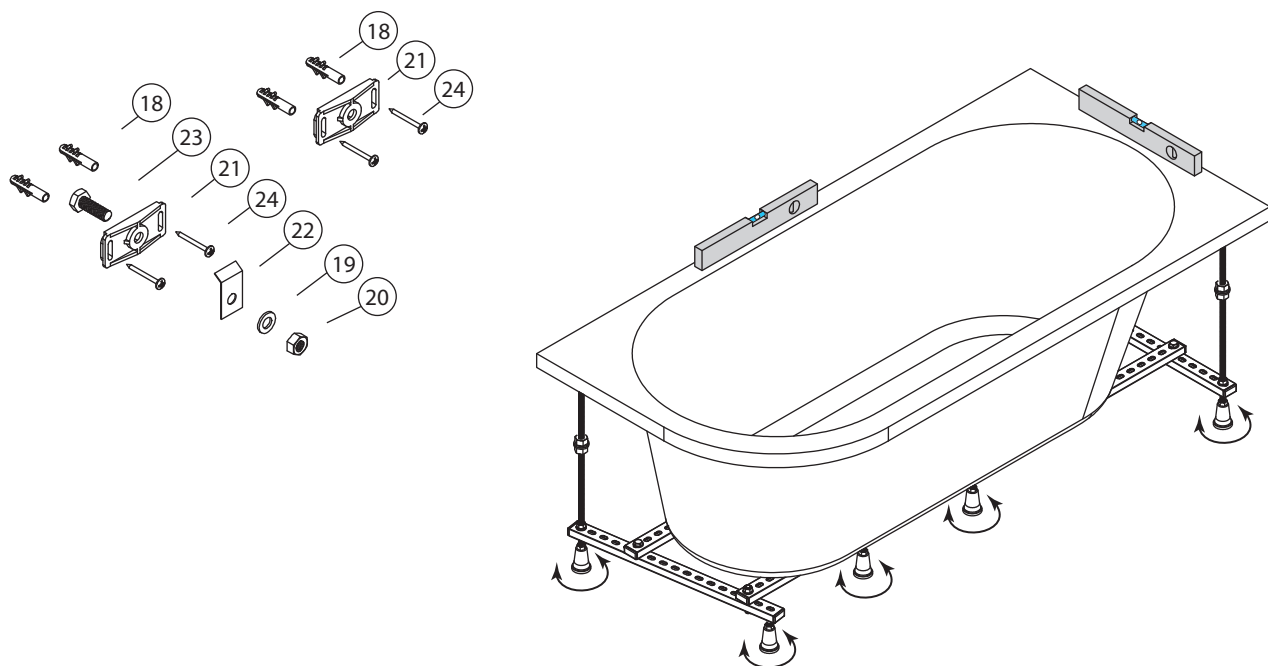

Optional: Art.no. 91020

